

# User Manual

For Tablet PC



Shenzhen P1...ics Co., Ltd.

## NOTICE


- Keep the device and all accessories out of the reach of small children.
- Do not use or store the device in dusty, hot, cold, electric, chemical, moist, or magnetic areas.
- Do not drop, shake or knock the device. Rough handling can break the device.
- Do not leave the device into areas that may become hotter without attention, like tables in sunshine, a car with all windows closed, or on bed & charging, because the device can get to very high temperature and may cause accident.
- Never play the device while driving! Keep your eyes focusing on the road.
- Please turn off the device in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.
- Please do not disassemble the device or change the case personally, as it will void your warranty.
- Please use proper power adapter along with packing, or suggested by qualified sellers.
- Due to different marketing period, product update, regional disparities, Android™ System update or such reasons, we may, without notifications to you, change or modify some functions which could be different from the content in this page, please refer to real product received.

## Functions


- Wi-Fi Wireless Networks.
- Bluetooth function.
- GPS Location.
- FM radio function.
- Built-in Google Android System.
- Built-in multiple languages.
- Different applications supported (.apk files).
- Various music file supported.
- 1080P videos supported.
- Pictures browsing with zooming and slide-show.
- E-book reading with bookmark function.
- Photographing and Video recording
- Built-in Email client.
- Built-in electronic calculator.
- Built-in electronic calendar
- Built-in voice recorder.
- All-directional G-Sensor.
- Built-in speaker and microphone.
- High-speed USB connection with PC.
- External Micro-SD card supported.
- External mouse and keyboard supported via OTG.

# Basic Operations


## Power On

Press Power button  for around 2 seconds and the device will start up and display the lock screen. Slide up to unlock the device, if needs password or pattern, please input them to unlock device.

## Power Off / Restart

Press Power button  for around 2 second and choose Power off in the popup, or choose Restart to re-boot the device.

## Standby

When the device is working, press Power button  shortly to shut the screen and it goes into standby mode. Press Power button again to awake the device, and slide the lock to continue.

## Volume + / -

At most interfaces, the volume buttons are used to adapt sound. At some interfaces, the volume buttons can be used to switch between selections, or zoom in / out, or take a picture.

 
## **Recharging**

When the device cannot be turned on normally or shut down automatically, it may need to be recharged. Notice: Please use proper chargers provided or guided by the manufacturer of this Tablet PC.

Standard charger: Power supply with AC 220V, Adapter output 5Volt and 2000mA

Warnings for charging: Battery in a new Tablet PC device may be empty, please recharge it after you get the device. If the device is not used for long time, it is better to charge it to 60%~80% capacity every 2 or 3 month during storage.

# Home Screen

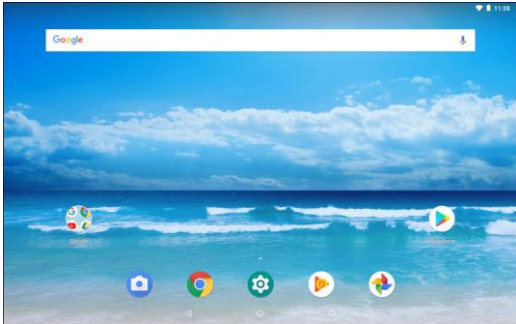



- **Notification Bar:** At the top of screen.

It displays time, battery, Wi-Fi signals, and notification icons or previews, etc.



- **Notification Panel:** Slide down from Notification Bar.

It displays switchers of functions and notifications. Tap the switchers to turn ON/OFF functions. Tap the notifications to open it, or slide it leftwards quickly to clear the notification. You can also slide the notification leftwards or rightwards

slowly, and click  to delay the notification, or click 

to set notification type.



- **Navigation Button:** At the bottom of screen.




**Back:** Tap it to go to the previous page.




**Home:** Tap it to go to the previous page.

 


**Recent Task:** Tap it to view recent tasks. Tap the task frame to open it, or long press it to remove from list.

- **Google Search Widget:** Tap the Widget to input keywords or tap the  icon for voice search (need network).



- **Enter App Menu:** At Home Screen, slide  up, or slide up at blank area of home screen to enter App menu, in which you can view all Apps list and search Apps.

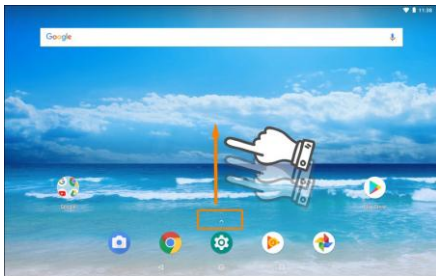

- **Add Home Screen Apps:** You can add App icon to Home Screen from App menu by long pressing App icon and move to Home Screen before loosen your finger. Click App icon to open it. Long press App icon to see most used functions and choose one to open.
- **Remove Home Screen Apps:** Long press App icon and move to top of screen to remove it.
- **Home Screen Settings:** Long press blank area of Home Screen, you can set WALLPAPERS, WIDGETS and SETTINGS from pop-up options. Tap SETTINGS and make general Home Screen settings.





- **Set Wallpaper:** Long press blank area of Home Screen, choose WALLPAPERS, and choose a way to open wallpapers. After choose a picture, tap Set wallpaper, set wallpaper as Home screen, or Lock screen, or Home screen and lock screen.




- **Add Widgets to Home Screen:** Long press blank area of Home Screen, choose WIDGETS, and press a widget and move to Home Screen before loosen your finger.
- **Home Screen Pages:** Long press a widget or App icon on Home Screen, and move to left or right edge of screen, the widget or App icon will be moved to another page (if no existed page, it will create a new page). At Home Screen, slide leftward or rightward to switch between pages.

# App Menu

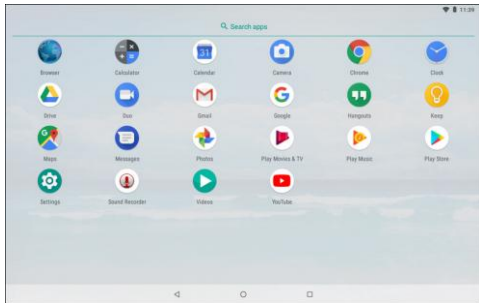 

At Home Screen, slide  up to enter App Menu, in which you can view all Apps list and search Apps.

 At App Menu, Slide up and down to view all Apps. Click an App icon to open it. Click Search apps to search Apps. Enter keywords of App name to search for Apps. At search result, Click App icon to open it.




# Wi-Fi

 
## ● Connect to Wi-Fi

With Wi-Fi network, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

## ● Activate the Wi-Fi

(1) At App Menu, tap Settings ,

(2) Tap Network & Internet, tap Wi-Fi switcher to turn on it.

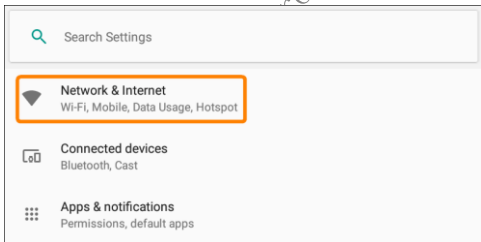

You can also turn on Wi-Fi from Notification Panel.

(3) Once you enter Wi-Fi, the device automatically searches for available Wi-Fi connection.

(4) Tap the name to select a Wi-Fi.

(5) Enter a password for the network (if necessary) and

select CONNECT.

After Wi-Fi is connected, it displays icon at notification bar.



#### ● **Remove connected Wi-Fi**

Long press a connected Wi-Fi name, choose Forget network.

## Bluetooth

You can connect to different Bluetooth devices, like speakers, keyboard, mouse, gamepad, etc.

#### ● **Pair with Bluetooth devices**

(1) At App Menu, tap Settings ,

(2) Tap Connected devices, tap Bluetooth switcher to turn on it.


You can also turn on Bluetooth from Notification Panel.

(3) Once you turn on Bluetooth, the device automatically searches for available devices.

(4) Tap Pair new device and the Tablet PC automatically searches for available devices. Tap the name to pair with a Bluetooth device.

(5) Enter PIN if required.

### ● Paired Bluetooth devices management

You can tap  icon beside paired devices to manage it.

**Rename:** Edit the name and tap OK.

**Remove:** Tap FORGET.

### ● Rename the Bluetooth name of Tablet PC

After Bluetooth turned on, you can tap Device name to rename the Bluetooth name of this Tablet PC, or tap Received files to view transfer history.

## Location

You can open GPS directly from Notification Panel. Tap Location to open GPS.

You can also open GPS from Settings – Security & location – Location, tap the switcher to turn on.

 
After turning on GPS, you can use Google Maps, please log in Google account. You can also use other map Apps.

Please notice, with GPS working on, battery consumption is higher than normal. You can directly open Notification Panel and tap Location again to turn off GPS to save battery.

## USB Connections

You can connect the device to a Computer via USB cable to charge the device or transfer files, etc.


After USB connected, slide down from Notification Bar. It displays Android System . USB charging this device, and you can tap for more options.

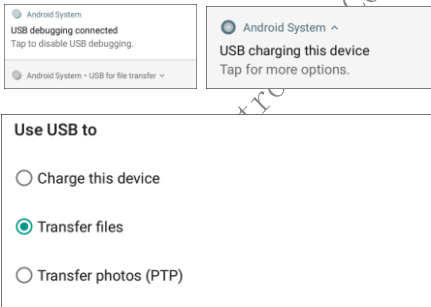

- **Charge this device:** it can just charging the device.
- **Transfer files:** You can transfer all kinds of files from available spaces.
- **Transfer photos (PTP):** You can only transfer photos from/to system default folder DICM and Pictures.

# Apps

## Install New Apps from Play Store

Play Store  allows you to easily download an abundance of Apps directly to your device. Before using the Play Store, you must have a Google Account.

- From the App Menu, tap Play Store.
- Sign in to your Google Account.
- Search for and download Apps as desired.
- Follow the on-screen instructions.

Note: All Apps offered by Play Store are developed by third party. To get the information about the developers, you can read the descriptions of each App. The original manufacturer of this Tablet PC is not liable for performance issues caused by third-party Apps.

## Install unknown Apps

Besides installing Apps from Play Store, you can also download App from browser, or transfer App packages from PC or other ways.

- Tap Setting – Apps & notifications – App.
- Tap Advanced.
- Tap Special app access.
- Tap Install unknown apps, and allow different ways of install apps according to needs.

## Install New Apps from device storage

If you have transfer Apps' package files into the device, you can tap ES File Explorer to find APK files locations.

Tap the APK name to install it.

 
## Apps management

- Tap Setting – Apps & notifications – App.
- Tap App and choose Force stop, or set App notifications, Permissions, Storage, Data usage, Open by default, Display over other apps, and Modify system settings by tapping selections.

Tips: If some App cannot run correctly, you can check Permissions settings if you have forbid necessary permissions of the App.

## Uninstall Apps

- Tap Setting – Apps & notifications – App.
- Tap See all apps to find the app you want to uninstall.
- Tap UNINSTALL and select OK.

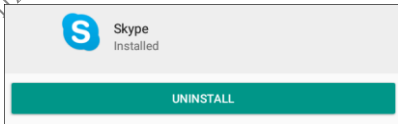



## Camera

With the camera function, you can take pictures and record videos. Tap the Camera icon to enter.


### ● Take a picture

(1) Before taking a picture, you need to make some adjustments. Place two fingers on the screen and move them apart or closer together to zoom in or zoom out.


(2) Aim the lens at the subject and tap shutter icon to take a photo. The photo is saved automatically to the folder DCIM. Tap thumbnail to view saved pictures, or open from Gallery.


### ● Record a video

(1) Tap  to change to video mode from picture mode.

(2) Tap  to start recording.


(3) During recording a video, tap the frame to take a picture, which does not stop the video recording.

(4) Tap  to pause, tap again to continue recording.

(5) Tap  to save the video to the folder DCIM.

(6) You can view saved video from Gallery.

 
### ● Camera Settings

Tap  at Camera interface to set up options for camera, including Image properties, picture size, video quality, etc. Please set according to actual needs.







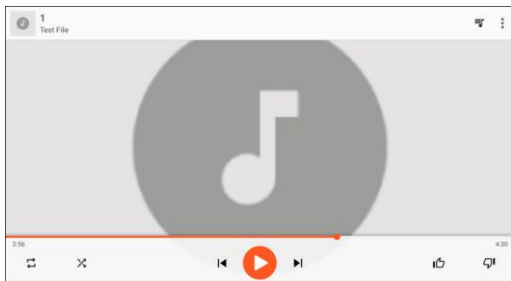



## Music

On the App Menu, tap **Play Music**  icon to access.


Note: Some files may not play properly depending on how they are encoded. To add music files to your device, transfer files to your device or memory card first.



**Play music:** Tap music folder name from **Recent activity**, and then tap music name to play.


	Loop Play (OFF)		Prev / Next Music
	Loop Play (ON)		Play / Pause
	Loop Play 1 Music		Like (Add to List)
	Random Play (OFF)		Unlike (Play next)
	Random Play (ON)		Show / Hide Playlist

### Create a playlist:


- 1) Tap the MENU icon  (next to the music file).
- 2) Select Add to playlist.
- 3) Select NEW PLAYLIST.
- 4) Enter a playlist Name and Description.
- 5) Tap CREATE PLAYLIST.

### Delete a playlist:

To delete a playlist, tap  icon at left top corner at Play


Music main interface, tap Music library, enter the playlist, tap the MENU icon  (next to the playlist name), and tap Delete.

## Search


Tap  to search music.




## Music library

 
Tap  icon at left top corner at Play Music main interface, and you can tap Music library to enter it. Here you can view music by PLAYLISTS, ARTISTS, ALBUMS, SONGS and GENRES.

## Settings


Tap  icon at left top corner at Play Music main interface, and you can tap Settings to enter it. Here you can set up Account, Manage Play Music history, Manage Activity controls, Manage Google Location History, Delete recommendation history, Delete my library, Privacy Help Centre, Equaliser, etc..


# Photo


To view or organize images, send your files to other devices and set pictures as wallpapers, select Photos  from App Menu.

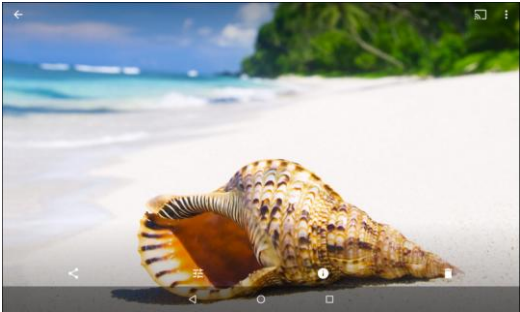



## View a picture

- (1) Select a picture to view. To view more pictures, scroll left or right.
- (2) To zoom in, place two fingers on the screen and spread them apart. To zoom out, move fingers closer together.
- (3) To start a slideshow, tap the option button  and then select Slideshow.


(4) To view the details of a file, tap the info button ,

(5) To share a picture with others via Email, tap .

(6) To set a picture as wallpaper, tap the menu button  at the upper right—select Use as, select Wallpaper, Zoom in or out, and then tap SET WALLPAPER.

 
(7) To edit a picture effect, tap  to edit.


## Video

To play or organize videos, select Photos  from App Menu.

### Play a video

Tap the video preview image to play the video.

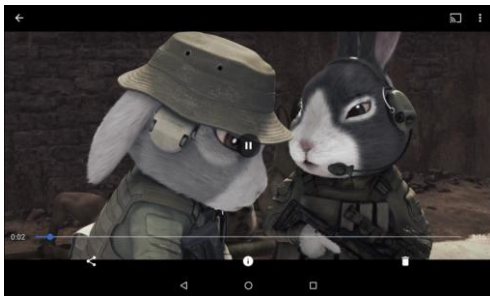


When playing, tap the screen and  icon to pause.  
Tap the bin icon to move the video to bin.  
Drag the line to change the playing progress.

You can also open video from **ES File Explorer**:


Tap **Internal Storage**, find video file location, and click video name, select **Photos** or other video app to play the video.

In **ES File Explorer**, you can also long press video files name, to copy, cut, delete, rename or do other operations to the video.

# Settings

Tap Setting icon  to enter system settings, including Network & Internet, Connected devices, App & Notification, Battery, Display, Sound, Storage, Security & Location, Users & account, Accessibility, Google, System. etc.

## Quick Search

You can also tap  at the upper area of Setting interface, input keywords of settings for quick access.

## Network & Internet

Set Wi-Fi, Hotspot, VPN, Airplane mode.

## Connected devices

Set Bluetooth, Cast, Printing, USB connection.

## App & Notification

Set Apps and Notifications.

## Battery

Check battery status, set up Power management, auto-sleep time of screen, etc.

## Display

Set up brightness level, wallpaper, auto-sleep time of screen,



auto-rotate screen, font size, display size, etc.

## **Sound**

Set up volume of media & alarm & notification, do not disturb preferences, default notification sound, default alarm sound, screen lock sounds, charging sounds, touch sounds, etc.

## **Storage**

Check used space, or free up spaces:

Tap **FREE UP SPACE**, select apps, and tap **FREE UP**.

## **Security & Location**

Check security status, set up screen lock (Swipe, Pattern, PIN, Password), Location, etc.

## **Users & account**

Sign in as owner, add account, Set up emergency information, etc.

## **Accessibility**

Set up Volume key shortcut (TalkBack), Text-to-speech output, Font size, Display size, Magnification, Color correction, Color inversion, Large mouse pointer, Click after pointer stops moving, Auto-rotate screen, Touch & hold delay, Audio & on-screen text, High contrast text, etc.

## Google

Set up Google services: Ads, Android Auto, Cast media controls, Location, Nearby, Restore contacts, Search, Security, Set up nearby device, Set up work profile, Firebase App Indexing, etc.

## System

Add a new language: To change languages, tap Languages & input, Languages, Add a language, after choose the language, long press the language name and move to top to set it as default language.

Manage input: Tap Virtual keyboard, tap the input name to manage.

Date & time: Set up Automatic date & time, time zone, date, time, time zone, 24-hour format, etc.

Backup: turn on/off Backup my data, to set up Backup account and Automatic restore.

Developer options: These are advanced settings, please don't change the default setting unless you are professional enough to manage them.

System update: check for update.

Reset options: you can choose DRM reset, Reset Wi-Fi, Bluetooth, Reset app preferences, Erase all data (factory reset).

**Factory reset:** Tap Reset, and tap ERASE EVERYTHING, the reset process takes around 5 minutes, after reset, the first boot-up time will be longer than normal, please wait for around 2 minutes.

### **Warning!**





Factory data reset will erase all data from your device and SD card, including your Google account, system and App data and settings and any other downloaded App, please backup your files before factory reset.

### **About device**

Check Status, Legal information, Model, Android version, Build number, etc.

## Frequently Asked Question

**Q: I don't read a foreign language, how can I change it back to English?**

- Find setting icon  and access Settings.
- Choose last selection System icon , choose the first icon  to enter Language & input setting, the first option is language setting, tap  to add a new language.

**Q: How can I set the screen auto shut off time?**

- Access Setting – Display – Sleep, and set default input.

**Q: How to set screen lock?**

- Access Setting – Security & Location – Screen lock, there are several different ways to set screen lock.

*Tips: Please do remember your screen lock Pattern or Pass word after setting, if you forget the pass word, you have to rebuild system of the Tablet (to reload Firmware/ROM Pack), you will lose all your applications or data in the Tablet PC. Please backup data regularly.*

**Q: What is APK file?**

- For Android system, all Apps' installation package file is in .APK format, just like for Windows system, installation package file is in .exe format.

### **Q: How to make factory reset?**

● Tap Reset, and tap ERASE EVERYTHING, the reset process takes around 5 minutes, after reset, the first boot-up time will be longer than normal, please wait for around 2 minutes.

**Warning:** Factory data reset will erase all data from your device and SD card, including your Google account, system and App data and settings and any other downloaded App, please backup your files before reset.

Google, Android and Google Play are trademarks of Google LLC.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.