

User Manual

For Tablet PC



NOTICE

- Keep the device and all accessories out of the reach of small children.
- Do not use or store the device in dusty, hot, cold, electric, chemical, moist, or magnetic areas.
- Do not drop, shake or knock the device. Rough handling can break the device.
- Do not leave the device into areas that may become hotter without attention, like tables in sunshine, a car with all windows closed, or on bed & charging, because the device can get to very high temperature and may cause accident.
- Never play the device while driving! Keep your eyes focusing on the road.
- Please turn off the device in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.
- Please do not disassemble the device or change the case personally, as it will void your warranty.
- Please use proper power adapter along with packing, or suggested by qualified sellers.
- Due to different marketing period, product update, regional disparities, Google System update or such reasons, we may, without notifications to you, change or modify some functions which could be different from the content in this page, please refer to real product received.

Main Functions Overview

- Wi-Fi Wireless Networks
- Bluetooth function.
- FM radio function.
- Built-in Google Android System.
- Built-in multiple languages.
- Different applications supported (.apk files).
- Various music file supported.
- 1080P videos supported.
- Pictures browsing with zooming and slide-show.
- E-book reading with bookmark function.
- Photographing and Video recording
- Built-in Email client.
- Built-in electronic calculator.
- Built-in electronic calendar
- Built-in voice recorder.
- All-directional G-Sensor.
- Built-in speaker and microphone.
- High-speed USB connection with PC.
- External Micro-SD card supported.
- External mouse and keyboard supported via OTG.

Basic Operations

Power On

Press Power button for around 2 seconds and the device will start up and display the lock screen. Slide up to unlock the device, if needs password or pattern, please input them to unlock device.

Power Off / Restart

Press Power button for around 2 second and choose Power off in the popup, or choose Restart to re-boot the device.

 
Standby

When the device is working, press Power button shortly to shut the screen and it goes into standby mode. Press Power button again to awake the device, and slide the lock to continue.

Volume + /

At most interfaces, the volume buttons are used to adapt sound. At some interfaces, the volume buttons can be used to switch between selections, or zoom in / out, or take a picture.

Home Screen

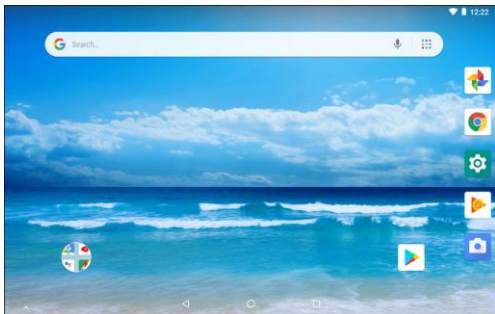



- **Notification Bar:** At the top of screen.




It displays time, battery, Wi-Fi signals, and notification icons or previews, etc.




- **Notification Panel:** Slide down from Notification Bar. It displays switchers of functions and notifications. Tap the switchers to turn ON/OFF functions. Tap the notifications to open it, or slide it leftwards quickly to clear the notification. You can also slide the notification leftwards or rightwards


slowly, and click  to delay the notification, or click  to set notification type.

- **Navigation Button:** At the bottom of screen.

	Back Button Tap it to go to the previous page.
	Home Tap it to go to Home Screen.
	Recent Task Tap it to view recent tasks. Tap the task frame to open it, or long press it to remove from list.

- **Google Search Widget:** Tap the Widget to input keywords or tap the  icon for voice search (need network).



 
- **Enter App Menu:** At Home Screen, slide  up to enter App menu, in which you can view all Apps list and search Apps.
- **Add Home Screen Apps:** You can add App icon to Home Screen from App menu by long pressing App icon and move to Home Screen before loosen your finger. Click App icon to open it. Long press App icon to see most used functions and choose one to open.
- **Remove Home Screen Apps:** Long press App icon and move to top of screen to remove it.
- **Home Screen Settings:** Long press blank area of Home Screen, you can set WALLPAPERS, WIDGETS and SETTINGS from pop-up options.
Tap SETTINGS and make general Home Screen settings.


● **Set Wallpaper:** Long press blank area of Home Screen, choose WALLPAPERS, and choose a way to open wallpapers. After choose a picture, tap Set wallpaper, set wallpaper as Home screen, or Lock screen, or Home screen and lock screen.

● **Add Widgets to Home Screen:** Long press blank area of Home Screen, choose WIDGETS, and press a widget and move to Home Screen before loosen your finger.

● **Home Screen Pages:** Long press a widget or App icon on Home Screen, and move to left or right edge of screen, the widget or App icon will be moved to another page (if no existed page, it will create a new page). At Home Screen, slide leftward or rightward to switch between pages.

App Menu

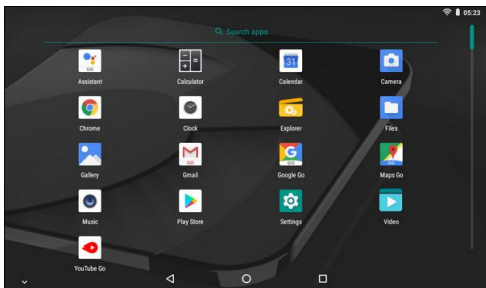

At Home Screen, slide  up to enter App Menu, in which you can view all Apps list and search Apps.

At App Menu, Slide up and down to view all Apps.

Click an App icon to open it.

Click Search apps to search Apps.




Enter keywords of App name to search for Apps. At search result, click App icon to open it.

Wi-Fi

● Connect to Wi-Fi

With Wi-Fi network, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

● Activate the Wi-Fi

- (1) At App Menu, tap Settings ,
- (2) Tap Network & Internet, tap Wi-Fi switcher to turn on it. You can also turn on Wi-Fi from Notification Panel.
- (3) Once you enter Wi-Fi, the device automatically searches for available Wi-Fi connection.
- (4) Tap the name to select a Wi-Fi.
- (5) Enter a password for the network (if necessary) and select CONNECT.

After Wi-Fi is connected, it displays icon at notification bar.



● Remove connected Wi-Fi

Long press a connected Wi-Fi name, choose Forget network.

USB Connections

You connect the device to a computer via USB cable to charge the device or transfer files, etc.

After USB connected, slide down from Notification Bar. It displays **Android System . USB charging this device**, and you can tap for more options.



Android System

USB debugging connected

Tap to disable USB debugging.



Android System • USB for file transfer ▾



Android System ^

USB charging this device

Tap for more options.

Use USB to

- ☐ Charge this device
- ☒ Transfer files
- ☐ Transfer photos (PTP)

- **Charge this device:** it can just charging the device.
- **Transfer files:** You can transfer all kinds of files from available spaces.
- **Transfer photos (PTP):** You can only transfer photos from/to system default folder DICM and Pictures.

Optional (if have)

- **Use device as MIDI:** Use Android devices as a peripheral controller for another Android device. For more information please visit android.com.

Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with applicable internet standards* for POP3 / IMAP / Exchange. Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.



To set up your email: 1) Tap Email from App Menu.

2) You can use mailbox guide to set up your mailbox, tap Next until it's done.

3. If you need to add another email account, tap the option button at the upper right – Settings -- ADD ACCOUNT, then set up the email account with the mailbox guide.

When you are finished setting up the email account, the email messages will be downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen, and select the one you want to retrieve messages from.

From Email function, you can always read, create, and send emails on this Tablet PC device.

Apps

Install New Apps from Play Store

Play Store



allows you to easily download an abundance of Apps directly to your device. Before using the Play Store, you must have a Google Account.

- From the App Menu, tap Play Store.
- Sign in to your Google Account.
- Search for and download Apps as desired.
- Follow the on-screen instructions.

Note: All Apps offered by Play Store are developed by third party. To get the information about the developers, you can read the descriptions of each App. The original manufacturer of this Tablet PC is not liable for performance issues caused by third-party Apps.

 
Install unknown Apps

Besides installing Apps from Play Store, you can also download App from browser, or transfer App packages from PC or other ways.

- Tap Setting – Apps & notifications – App.
- Tap Advanced.
- Tap Special app access.
- Tap Install unknown apps, and allow different ways of install apps according to needs

Applications management.

- Tap Setting – Apps & notifications – App.
- Tap App and choose Force stop, or set App notifications, Permissions, Storage, Data usage, Open by default, Display over other apps, and Modify system settings by tapping selections.

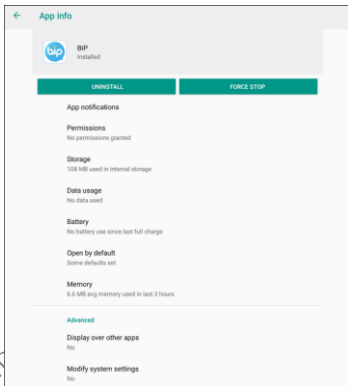

Tips: If some App cannot run correctly, you can check Permissions settings if you have forbid necessary permissions of the App.

Music

On the App Menu, tap Music  icon to access.

Note: Some files may not play properly depending on how they are encoded. To add music files to your device, transfer files to your device or memory card first.

Play music

- (1) Select a music file.
- (2) Control playback with virtual keys.



The current list of songs are randomly played.




Replays the current list when the list ends.



Repeats the current playing song.

Create a playlist

- 1) Tap the MENU icon  (next to the music file).
- 2) Select Add to playlist.
- 3) Select New.
- 4) Enter a name.
- 5) Tap Save.

To delete a playlist, tap the music button on the upper left and then select Playlists, and then tap the MENU button next to the playlist you want to delete and select Delete.



Gallery

To view or organize images and videos, send your files to other devices and set pictures as wallpapers, select [Gallery](#)



from App Menu.

View a picture





- (1) Select a folder.
- (2) Select a picture to view. To view more pictures, scroll left or right.
- (3) To zoom in, place two fingers on the screen and spread them apart. To zoom out, move fingers closer together. You can also double-tap the screen.
- (4) To start a slideshow, tap the option button and then select [Slideshow](#).
- (5) To view the details of a file, tap the option button, then select [Details](#).
- (6) To share a picture with others via Email, tap  at the title bar.
- (7) To set a picture as wallpaper, tap the menu button  at the upper right—select [Set picture as Wallpaper](#), Zoom in or out to set wallpaper effect, and then tap [Set wallpaper](#).

Edit a picture

- (1) To crop the image, tap the option button at the upper right, then select [Crop](#).

- To move the crop box, tap and hold the crop box and drag it to the desired location.
- To add or subtract from the selection border of the crop box, drag the crop box to the desired size.
- When you are finished, tap Save.

(2) To edit pictures and apply various effects, tap the option button at the top right, then select Edit.

- To apply a color effect, tap .
- To apply a photo frame effect, tap .
- To crop, straighten, rotate or flip the image, tap .
- To adjust contrast, tap .

Play a video

- 1) Select a folder.
- 2) Select a video to play.
- 3) Control playback with the virtual keys.

Tips: You can also use a 3rd party video player App to play videos, or open the video files from File Manager directly. Moreover, you can install third party apps to play videos.





Camera

With the camera function, you can take pictures and record videos. Tap the Camera icon to enter.


● Take a picture

- (1) Before taking a picture, you need to make some adjustments. Place two fingers on the screen and move them apart or closer together to zoom in or zoom out.
- (2) Aim the lens at the subject and tap shutter icon to take a photo. The photo is saved automatically to the folder DCIM. Tap thumbnail to view saved pictures, or open from Gallery.
- (3) Slide from left edge of the frame to switch photographing and video recording mode.


● Record a video

- (1) Tap  to change to video mode from picture mode.
- (2) Tap  to start recording.
- (3) During recording a video, tap the frame to take a picture, which does not stop the video recording.
- (4) Tap  to pause, tap again to continue recording.
- (5) Tap  to save the video to the folder DCIM.
- (6) You can view saved video from Gallery.


● Camera Settings

Tap  at Camera interface to set up options for camera, including Image properties, picture size, video quality, etc. Please set according to actual needs.

System Settings

Tap Setting icon  to enter system settings, including Network & Internet, Connected devices, App & Notification, Battery, Display, Sound, Storage, Security & Location, Users & account, Accessibility, Google, System. etc.

Quick Search

You can also tap  at the upper area of Setting interface, input keywords of settings for quick access.

Network & Internet

Set Wi-Fi, Hotspot, VPN, Airplane mode.

Connected devices

Set Bluetooth, Cast, Printing, USB connection.

App & Notification

Set Apps and Notifications.

Battery

Check battery status, set up Power management, auto-sleep time of screen, etc.

Display

Set up brightness level, wallpaper, auto-sleep time of screen,

auto-rotate screen, font size, display size, etc.

Sound

Set up volume of media & alarm & notification, do not disturb preferences, default notification sound, default alarm sound, screen lock sounds, charging sounds, touch sounds, etc.

Storage

Check used space, or free up spaces:

Tap **FREE UP SPACE**, select apps, and tap **FREE UP**.

Security & Location

Check security status, set up screen lock (Swipe, Pattern, PIN, Password), Location, etc.

Users & account

Sign in as owner, add account, Set up emergency information, etc.

Accessibility

Set up Volume key shortcut (TalkBack), Text-to-speech output, Font size, Display size, Magnification, Color correction, Color inversion, Large mouse pointer, Click after pointer stops moving, Auto-rotate screen, Touch & hold delay, Audio & on-screen text, High contrast text, etc.

Google

Set up Google services: Ads, Android Auto, Cast media controls, Location, Nearby, Restore contacts, Search, Security, Set up nearby device, Set up work profile, Firebase App Indexing, etc.

System

Add a new language: To change languages, tap **Languages & input, Languages, Add a language**, after choose the language, long press the language name and move to top to set it as default language.

Manage input: Tap **Virtual keyboard**, tap the input name to manage.

Date & time: Set up Automatic date & time, time zone, date, time, time zone, 24-hour format, etc.

Backup: turn on/off **Backup my data**, to set up **Backup account** and **Automatic restore**.

Developer options: These are advanced settings, please don't change the default setting unless you are professional enough to manage them.

System update: check for update.

Reset options: you can choose DRM reset, Reset Wi-Fi, Bluetooth, Reset app preferences, Erase all data (factory reset).

Factory reset: Tap Reset, and tap ERASE EVERYTHING, the reset process takes around 5 minutes, after reset, the first boot-up time will be longer than normal, please wait for around 2 minutes.

Warning!




Factory data reset will erase all data from your device and SD card, including your Google account, system and App data and settings and any other downloaded App, please backup your files before factory reset.

About device

Check Status, Legal information, Model, Android version, Build number, etc.

FAQ

Q: I don't read a foreign language, how can I change it back to English?

- Find setting icon  and access Settings.
- Choose last selection System icon , choose the first icon  to enter Language & input setting, the first option is language setting, tap + to add a new language.

Q: How can I set the screen auto shut off time?

- Access Setting – Display – Sleep, and set default input.

Q: How to set screen lock?

- Access Setting – Security & Location – Screen lock, there are several different ways to set screen lock.

Tips: Please do remember your screen lock Pattern or Pass word after setting, if you forget the pass word, you have to rebuild system of the Tablet (to reload Firmware/ROM Pack), you will lose all your applications or data in the Tablet PC. Please backup data regularly.

About Firmware

Firmware (*ROM Package*) contained in the Tablet PC provides the control program for the device, and it is offered by the original manufacturer.

Reloading firmware is to rebuild system into the Tablet PC, and it is the final solution to serious system problems. After reloading firmware, all user's data will be cleaned. For common breakdown, users can just restart the Tablet PC, or run *factory reset*. If system crashes appear continuously even users have run factory reset, they can reload firmware under professional guidance.

The firmware preloaded in the Tablet PC is a stable version for the device, please do not reload firmware unless it is absolutely necessary. We DO NOT suggest users reloading firmware without professional guidance, and we shall be not responsible for Tablet PC's breakdown caused by users' improper operation.

For further information of firmware, please contact with the manufacturer of the device.