



Bluetooth Heart Rate Smart Watch

— — **User Guide** — —

Contents

I Quick Guide	1
II Phone	5
III Notifier	6
IV Health	6
V Remote	7
VI Tool	8
VII Settings	9
* Safety Warnings & Precautions	11
* Safety Warnings for Using Battery and Power	
Adapter	11
* Maintenance and Care	12
* Children Health	12

I Quick Guide

1.1 Turn On/Off

Power On: Long press the side button of the smart watch to turn on.


Power Off: In the standby interface of the smart watch, long press the side button to turn off.

1.2 Standby Interface


1.2.1 Switch Dials

In the standby interface of the smart watch, the preview dials will appear after long press the screen, you can slide left or right to switch and choose the dials, then click "OK" to set successfully.

1.2.2 Pull-down Menu

In the standby interface of the smart watch, pull down the screen, will display time, charging capacity, and check the Bluetooth connection status. Click  to choose turn on/off non-disturbed mode. Click



to choose the brightness of the screen.  Click to choose the volume of the smart watch.

1.3 Charging

- Put the smart watch on the charging stand equipped with the smart watch, and connect the USB to the charging stand ,then connect the power supply to charge.
- After inserting the charger, the battery strength icon at the top right of the screen will start to scroll indicating that charging has begun. When the battery is full, the charging icon will stop scrolling and the battery symbol on the screen will be full.

- After charging completely, disconnect the charger from the power outlet and disconnect the smart watch from the charger.

1.4 Pairing Smart Phone

Android Smart Phone: Supporting original operating system Android 4.4 and above edition.

iPhone: Supporting original operating system IOS 7.0 and above edition ,in other words, supporting update version iPhone of iPhone 5S.

1.5 Bluetooth connection

1.5.1 FunDo APP download and install


Through the WeChat or Android Market scanning function, scan the built-in QR code in the setting of the smart watch or download and install the FunDo APP in the mobile application market such as AppStore and Google Play etc.




After installing successfully, the UI will be displayed as above icon. Click the icon, when the Read SMS and Location Info dialog box is displayed, click Allow. Open the login interface , use the email address to register and log in successfully (you can also use third-party applications such as WeChat or Facebook to log in). Following the instruction to turn on the notification to obtain the read permission.

1.5.2 Paired with Android Smart Phone


Turn on the Bluetooth of smart phone and smart watch, open Fundo

APP, click "More"  select Add device -> start search and automatically search Bluetooth devices that are opened nearby, find the name of the smart watch and pair with it, after pairing successfully, the Bluetooth icon in the status bar of the smart watch shows blue color (indicate that both Bluetooth 3.0 and 4.0 are connected). At this point, click " Find Device", the smart watch will ring, indicating the smart watch and mobile phone can search each other successfully. (For detail information, please check the APP " User guide")


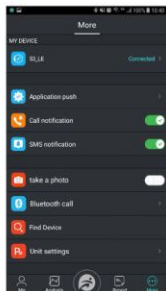


1.5.3 Paired with iPhone

Turn on the Bluetooth of smart phone and smart watch, open Fundo

APP, click "More"  select Add device -> start search and automatically search Bluetooth devices that are opened nearby, find the name of the smart watch and pair with it, after pairing successfully,

the Bluetooth icon in the status bar of the smart watch shows blue color (indicate that both Bluetooth 3.0 and 4.0 are connected). At this point, click “ Find Device”, the smart watch will ring, indicating the smart watch and mobile phone can search each other successfully. (For detail information, please check the APP “ User guide”)
Note: At this point, the Bluetooth menu interface shows that a Bluetooth device has been connected successfully, open the phone setting -> Bluetooth, find the name of the smart watch and pair with it, after pairing successful, the menu interface shows that there are two Bluetooth devices connected successfully, at this point, the Bluetooth icon in the status bar of the smart watch shows green color (indicate that both Bluetooth 3.0 and 4.0 are connected).

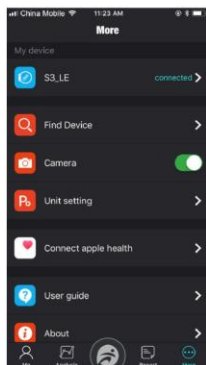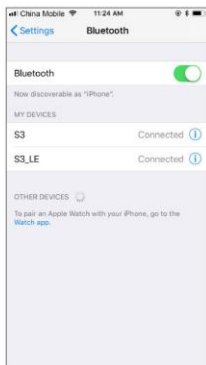

II Phone

2.1 Dialing

2.1.1 Dialer

Click the Dialer icon, touch the screen to input the phone number, click the dial icon in the lower left corner, you can make the Bluetooth call.

2.1.2 Phonebook

After syncing with smart phone, you can view the Phonebook.

2.1.3 Call History

After syncing with smart phone, you can check the call history and select the contact you want to call.

2.1.4 Messaging


After successfully Bluetooth paired with Android phone , it can synchronize mobile phone SMS;
iPhone does not support synchronous SMS temporarily.


2.2 Answer Or Reject Incoming Call

- When the caller interface is displayed:
- Slide rightward "  " to answer the call.
- Slide leftward "  " to reject the call.

2.3 Menu During bluetooth calling

Call interface can do the following operation:

- Click"  "hang up the phone

- Click“  ”open dial menu
- Slide the screen up and down to adjust the volume

III Notifier

After Bluetooth paired successfully, the smart watch and mobile phone can search each other, the terminal of smart watch can accept the new messages from the mobile phone, such as QQ, Wechat, incoming calls, short message, etc.

IV Health

4.1 Pedometer

After power on, the smart watch will count steps automatically. The pedometer data will synchronize into the APP terminal after the Bluetooth of smart watch and smart phone connect successfully. In the pedometer interface, slide the screen upward to enter into “options” interface, you can check and set “ Status, History, Goal, Gender, Height, Weight”.

- If need to recount steps (Operating methods: In the smart watch terminal, Settings→Reset→Smart watch power offer and then power on automatically)

4.2 Heart Rate, BIp, Oxygen

Click Heart rate, BIp(Blood pressure), Oxygen to test, after testing,

the screen of smart watch will show the testing data, and the testing data will synchronize into the APP terminal after the Bluetooth of smart watch and smart phone connect successfully.

In the heart rate interface, slide the screen downward to enter into "options" interface, you can check and set "History, Mode, Help".

4.3 Sleep Monitor

From 9:00pm to 9:00am, the sleeping monitor function will be turned on automatically. The sleeping data will synchronize into the APP terminal after the Bluetooth of smart watch and smart phone connect successfully. In the "last night sleep" interface, slide the screen upward to enter into "options" interface, you can check and set "History, Mode, Help".

4.4 Sedentary

Choosing sedentary time (based on 30mins internal,Min 0m←→ 300m Max),after setting successfully, when the setting time arrives, the smart watch will vibrate and ring to reminder.

4.5 Drink

After turning on drink function, from 9:00 am to 9:00 pm every day, the smart watch will reminder you to drink water every hour. In the drink interface, slide the screen upward to enter into " Help" interface.

V Remote

5.1 Anti-lost Function

After the Bluetooth of smart watch and smart phone paired successfully, click "anti-lost" in the smart watch terminal, then click

"start ", the smart phone terminal will vibrate and ring.

5.2 Remote Camera Control Function

After the Bluetooth of smart watch and smart phone paired successfully, click "camera" in the smart watch terminal, then can take photos successful and the photos will be saved in the smart phone terminal.

5.3 BT Music

After the Bluetooth of smart watch and smart phone paired successfully, the smart watch can control to play or stop , play the last song or play the next song in the smart phone (the smart watch will only be able to control the BT music and can not listen the BT music).

VI Tool

6.1 Alarm

You can set the alarm time, the number of ring time, and reminder types.

6.2 Calender

In the " calender" interface, you can check the current date; click the rose button, you can check the current month, and slide up and down to switch months.

6.3 Stopwatch

Click the lower left corner of the button to start the timing, click the right bottom button in the interface to keep the timing, click the lower left corner button to stop the timing, up and down slide screen to view

historical data, and then click the button data in the lower right corner to clear the data.

6.4 Calculator

In the “calculator” interface, click the soft keyboard to input data and count.

6.5 Weather

After the Bluetooth of smart watch and smart phone paired successfully, the smart watch terminal can check the current weather status.

VII Settings

7.1 BT Settings

- When the smart watch is not connected to the Bluetooth of the smart phone, in the terminal of smart watch, you can turn on/off the Bluetooth.
- When the smart watch is successfully connected to the Bluetooth of the smart phone, in the terminal of smart watch, you will need to release all connections first before turning off the Bluetooth; Or you can also turn off the Bluetooth in the smart phone terminal.

7.2 Clock

- Setting the type of the clock, and will display in the standby interface after setting successfully.
- Power on “Time Sync”, you can setting time and time mode manually.

- Power off "Time Sync", after the Bluetooth of smart watch and smart phone paired successfully, the smart watch terminal will synchronize the time on the smart phone.

7.3 Sound

- Set alert type: only ring, only vibrate, ring and vibrate, vibrate after ringing, mute
- Select ringtone
- Select notification tone

7.4 Volume

Setting the volume of multimedia, ring, notification

7.5 Display

Setting the style of main interface, adjust the brightness of screen, and choosing screen time-out.

7.6 International

Power off automatic sync, you can select and setting languages.

Power on automatic sync, after the Bluetooth of smart watch and smart phone paired successfully, the smart watch terminal will synchronize the language of the smart phone (on condition that the smart watch terminal have the language).

7.7 Motion

- Flip to mute incoming call: Turning on, flip to mute incoming calls.
- Flip to mute alarm: Turning on, flip to mute alarm.
- Wake-up gesture: Turning on, tilting smart watch to non-brighten the screen ; lie flat to brighten the screen, 90°towards you, the screen will brighten
- Shaking switch main menu: Turning on, in the first-level menu,

shake smart watch to switch pages.

- Shake to answer the call: Turning on, in the coming call interface, shake smart watch two or three times to answer the call.

7.8 APP Download (QR code)

Using smart phone scan the QR code on the smart watch or you can also down Fundo APP from the Google Play store or Apple Store.

7.9 Restore Factory Settings

In the smart watch terminal, click reset→smart watch will reboot automatically and will erase all data from your smart watch.

7.10 About

You can check the device name, device address, Bluetooth device and edition.

*** Safety Warnings & Precautions**

Before using the product, please read and comply with the following warnings and precautions to avoid any dangers or illegal conditions, and ensure the product works in best performance. Packing box and user manual come with important instructions on them. Please keep them well.

*** Safety Warnings for Using Battery and Power Adapter**

This product does not come with power adapter. If users want to use the power adapter for charge, it's recommended to use the qualified DC 5V/500mA power adapter, or it's possibly to damage the product or even cause safety accidents. Please do not disassemble, impact, squeeze, short circuit or refit the battery or put it into fire to avoid battery leakage, overheating or explosion.

Do not put the battery in high-temperature environment. It's prohibited to use the battery after it's immersed in water. If the battery leaks, please do not allow the skin or eyes to be exposed to the escaping liquid; If the liquid gets on the skin or glasses, please rinse immediately with water and go to the hospital for medical care if necessary. End of power adapter may be shorted, which may cause safety accident. Please do not use the product in the process of charging.

*** Maintenance and Care**

This product is waterproof, however according to IP67 electronic waterproof technology standards, please do not wear the bracelet when swimming in water depth under 1 meter or when shower in hot water. Please do not use strong chemicals, cleaning agents or detergents to clean the product or its accessories. The product contains circuits and batteries. Please do not disassemble this product or its accessories to avoid damages or safety accidents. Unauthorized disassembling will cause invalid warranty. If LCD is broken by crash, please do not touch the broken parts. Please stop using the bracelet immediately and contact the designated after-sales service.

*** Children Health**

This product and its accessories contain small parts that may cause suffocation or other hazards. It's required to unpack the product and charge it by adults. Children aged 3-14 should use it under adult supervision. It's not suitable for children aged 3 years and under.